

For use on any surface including: wood, aluminum, vinyl, stucco, hardboard, brick, or masonry.

Materials and Tools You Need: Electric drill, 5/16" drill bit, hammer, and shutter spikes.


**1** Place the shutter next to the window and mark desired location against the wall or window. (See Figure 1)

**2** For all sizes use six shutter spikes per shutter.

**3** To help ensure proper alignment, mark or pre-drill holes using a 5/16" drill bit into the shutter before attaching it to the wall.

**4** With the shutter in location against the wall, drill through the shutter into the wall surface 2 3/4" deep. Make sure you drill holes deep enough so the shutter spike doesn't bottom out.

**5** Grasp the shutter spike supporting shank and push it through the shutter hole and into the wall surface. Tap the shutter spike gently with a hammer to snug the shutter against the siding. **DO NOT OVER TIGHTEN**, or this will cause the shutter to dimple.

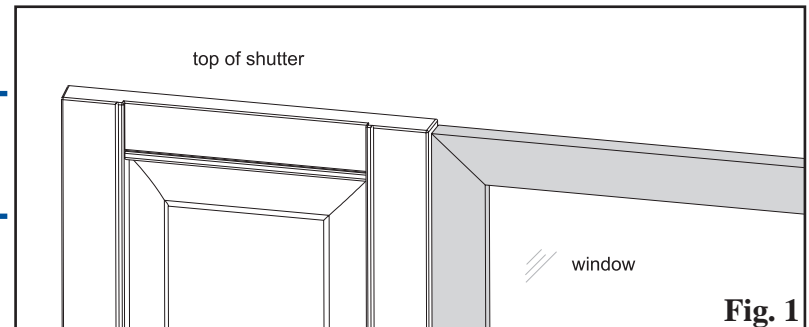

**Fig. 1**

